


## PRODUCT INFORMATION PACKET

PRODUCT NAME: ME – 3750 Rolling Stage

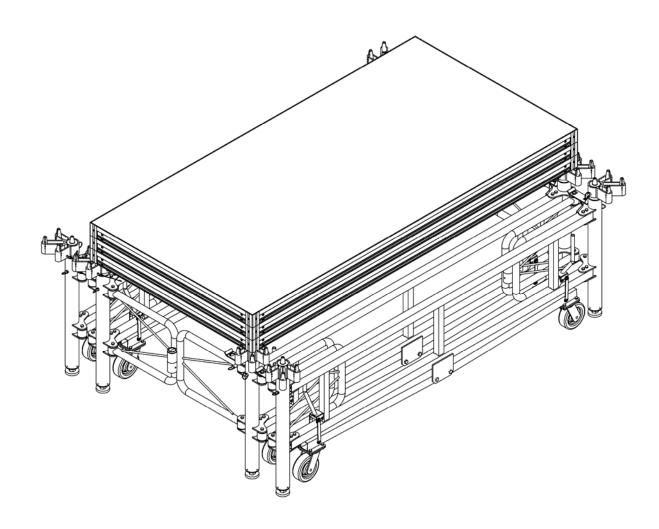

### Table of Contents

•	Introduction	1
	General Safety Rules	
	Symbols	
	Technical Specifications	
	Instructions	
	Maintenance	
	Customer Service Information.	

### Introduction

The StageRight ME-3750 Support System has been designed and manufactured with safety, performance and dependability as top priorities, making it easy to operate and maintain.

The care you give your ME-3750 will greatly determine your satisfaction with its performance and service life. Careful study of this manual is encouraged to obtain a thorough understanding of your new ME-3750 and its functions and maintenance.

If your manual becomes lost or destroyed, StageRight will gladly provide you with a new copy. Should you require additional information or assistance, please feel free to contact us at 1-800-438-4499.

BECAUSE STAGERIGHT CORPORATION MAINTAINS AN ONGOING PROGRAM OF PRODUCT DEVELOPMENT AND IMPROVEMENT, WE RESERVE THE RIGHT TO MAKE IMPROVEMENTS IN DESIGN OR CHANGES IN SPECIFICATIONS WITHOUT INCURRING ANY OBLIGATIONS TO INSTALL THEM ON UNITS PREVIOUSLY SOLD.

### **General Safety Rules**




# WARNING! READ AND UNDERSTAND ALL INSTRUCTIONS.

Failure to follow all instructions listed below may result in serious personal injury.

#### SAVE THESE INSTRUCTIONS

- Stay clear of all pinch points.
- Make sure that all fasteners are properly engaged before use. Faspins and jam nuts need to be properly engaged before use.
- Make sure that all decks are positioned properly onto the support system.
- Save these instructions. Refer to them frequently and use them to instruct others who may use the ME 3750 Rolling Stage.
- Read the Product Information Packet. Failure to read the information packet is considered a misuse of this equipment.
- Become familiar with all caution and warning decals affixed to the support system before use.
- Never cover or deface caution/warning labels.


### **Symbols**

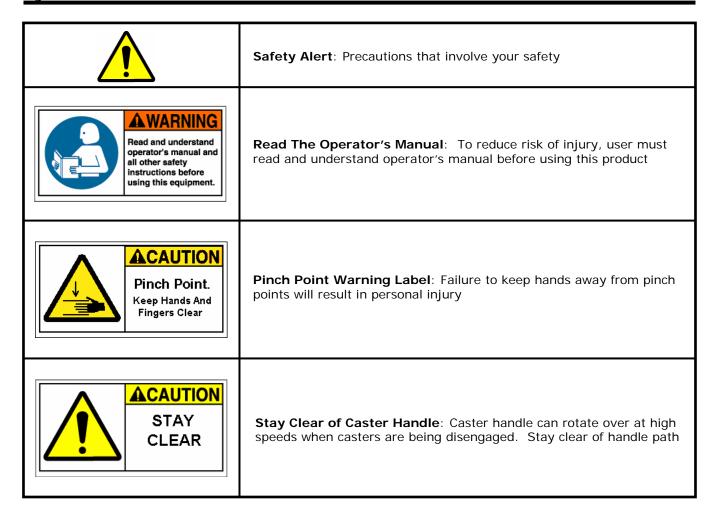


# StageRight Corporation Technical Specifications

### ME - 3750 Rolling Stage


PART#	DESCRIPTION	WT. (LB.)
319336	36"-56" ADJUSTABLE HEIGHT	540
319348	48"-78" ADJUSTABLE HEIGHT	590

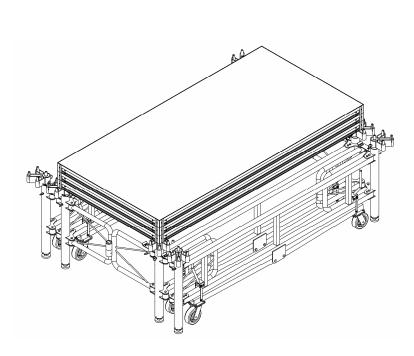


#### SIDE VIEW:

 


#### TOP VIEW:

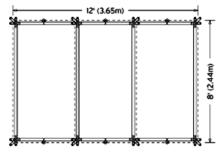

#### END VIEW:

 


#### END VIEW: Storage Position (Shown with & without decks)

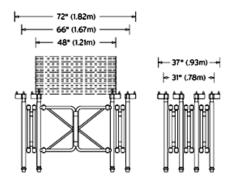


#### Construction, Finish, and Hardware

- Constructed of ASTM specified steel and aluminum
- Nodes made of high strength nylon and DK1215 steel
- Molded urethane foot boss
- Baked-on powder coat finish.
- Zinc-plated hardware.

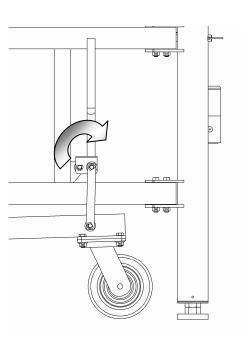


\*Note: The complete set-up of this unit will require at least two people. Engage the casters on the ME – 3750 by rotating the handle assembly to its horizontal position.

2

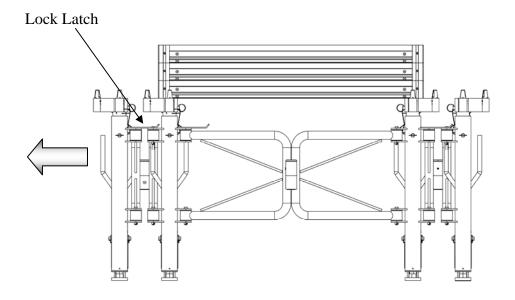


With the casters engaged, release the lock latch, and begin by pulling out on one side of the ME – 3750.

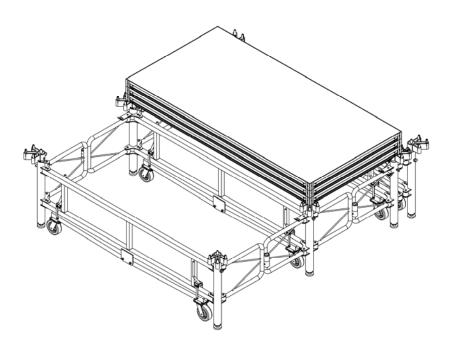


Continue to pull out on the side of the ME - 3750 until it is fully engaged.

4

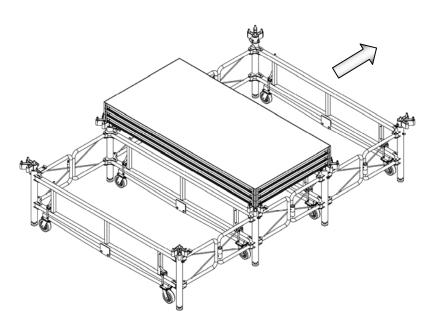


Next pull out on the remaining side of the ME - 3750 assembly until it is engaged.

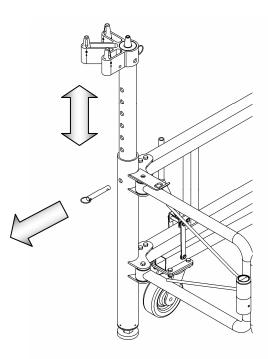


To select stage heights in two inch increments, simply remove the faspins from the leg tubes and then raise or lower the tubes to the desired height. Once the desired height is obtained, re-insert the faspins.

6

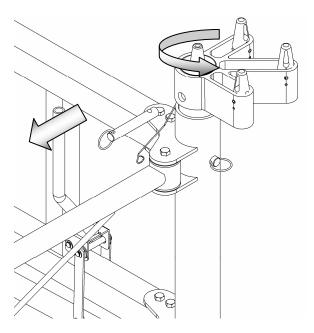


To change the position of the locator nodes begin by removing the faspin that keeps the locator assembly in place. Rotate the locator assembly to the desired position and then re-insert the faspin.

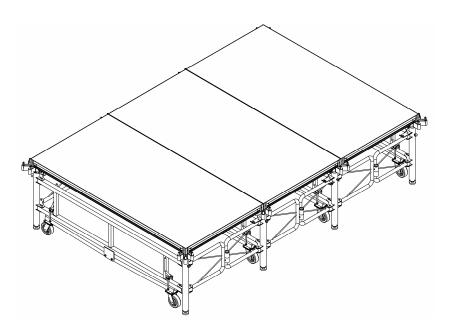


Once the desired stage height and node positioning is obtained, place the decks onto the node receptacles. Next roll the ME - 3750 assembly to the desired location. Disengage the casters by lifting the handle to its vertical position.


8

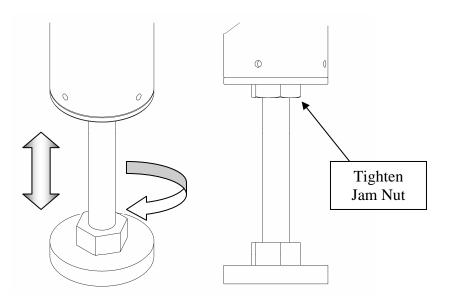

For fine adjustment leveling, simply turn the screw foot in or out to allow variation in height up to five inches. Once the decks are leveled, go back and tighten down all Jam nuts and disengage all casters by rotating the caster handle to its vertical position.

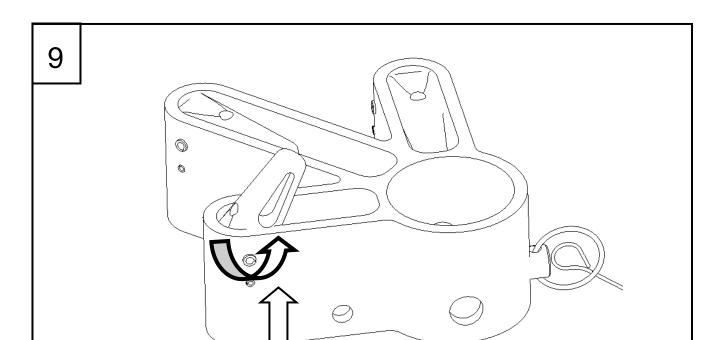

To raise or lower a node on a retractable locator assembly, grip the node with your thumb and middle finger to direct it forward and upward.

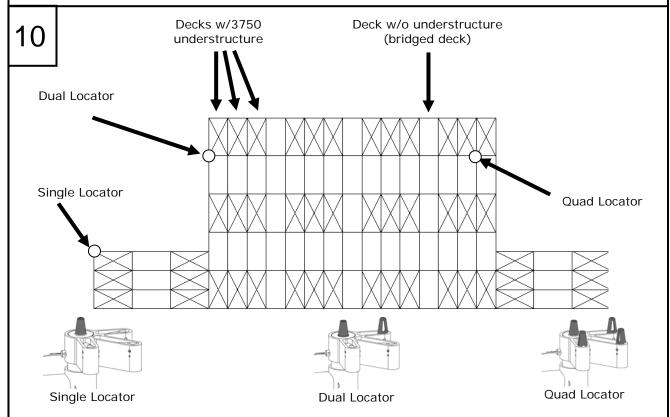

Align understructures as shown, using proper locator combinations and bridge decks to save understructure setup and leveling time.



#### **WARNING!**

#### **Read and Understand All Maintenance Procedures**

Failure to follow all procedures listed below may cause serious injury and a decrease in the equipments functional existence.

- Frequently check to see that all fasteners are properly engaged.
- Touch up paint can be used to cover any scratches or blemishes sustained through use.
- Replace any damaged equipment with genuine StageRight parts. Failure to do so may result in unsafe equipment and/or personal injury.

### **Customer Service**

For parts or service contact StageRight Corporation. When ordering parts be sure to provide all relevant information available including the name and part number of the equipment purchased. This information is located on the technical specification page of this product information package. Customer Service hours are Monday thru Friday from 8:00 a.m. to 5:00 p.m. Eastern Standard Time. Customers can phone toll-free at (800) 438-4499 or mail:

StageRight Corporation 495 Pioneer Parkway Clare, Michigan 48617 www.stageright.com



SET UP IN MINUTES



STURDY, WITH NO TOOLS REQUIRED



UNSURPASSED CUSTOMER SERVICE

StageRight Corporation 495 Pioneer Parkway Clare, MI 48617

Toll-free: 800-438-4499 Phone: 989-386-7393

Fax: 989-386-3500 Email: info@stageright.com Web: www.stageright.com